

Instructions



Check that all of the volume controls are down to zero.



Connect the power cable and the 2 speaker cables at the back of the amplifier.

Connect the other end of the speaker cables to the input socket on the back of each speaker.

Microphone

The unit does not have phantom power, so only suitable for dynamic microphones. Plug the microphone lead into any of the 8 channels. The microphone is a loose fit in the stand. Change the head if you need a tight fit. The switch on the microphone needs to be on. Use the volume control on that channel, as well as the Master.



Input devices

For audio input from a phone or computer, plug into Aux (A). Use the Aux volume control (B) as well as the Master (C).

For Line input from another device, use any of the Line In (D).

Bluetooth and USB

Select Mode (E).

For Bluetooth, look for SZPA-815.

Use the volume buttons on the Media Player (F).

Shutting down

Turn all the volume controls to zero and switch off the power (G).

Press the button on the microphone cable to release the microphone.


Switch the microphone stand heads back if appropriate.

Check the inventory list overleaf.

Put the microphone in its bag and put all of the accessories in the box.

Return the extension lead to the container and everything else to the electrical cupboard.

Inventory

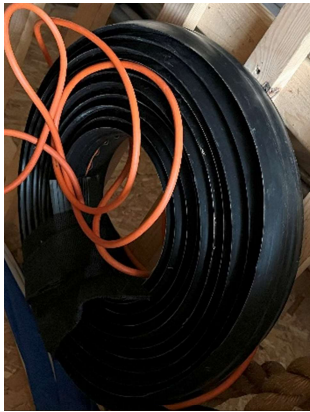

14m Extension Lead
in the container



Speaker Leads



10m Microphone Cable



Power Lead



Microphone and Bag



6.4mm x 3.5mm
Jack Adaptor



6.4mm x 3.5mm Input Lead



Head for Microphone Stand



The stands are in the container.
These should not be used as the
extreme height and the weight of
the speakers makes them
dangerous.



RCA x 3.5mm Input Lead



4 Gang Extension Lead



Adapter